

D940 DualSIM



Quick Guide

Contents

Important instructions.....	3
Your mobile phone.....	5
Insert battery, SIM and memory cards.....	6
Battery charging.....	6
Switch On / Off.....	7
Making calls.....	7
Keypad lock.....	7
Volume control.....	8
Position of antennas.....	8
Text insert.....	8
Telephone directory.....	9
Torchlight.....	10
Shortcuts.....	10
Safety and ecology.....	10
Declaration of conformity.....	11

Before you start

Thank you for buying of our ALIGATOR mobile phone.


Before you start please read carefully this instruction manual.

Important instructions

- Protect microphone holes, headphone and speaker against dust and penetration of sharp objects
- Do not use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Do not use mobile phone near the petrol stations
- Always switch off the mobile phone near explosives
- Use only the original batteries supplied by the producer
Danger of damage of the mobile phone or explosion
- SAR – mobile phone meets all prescriptions for maximal emission of electromagnetic radiation
- Please keep the mobile phone 2.5 cm away from the body while calling. You lower by that the quantity of electromagnetic radiation absorbed by your body
- Handle the mobile phone and accessories with care, protect it from falling on the ground, from mechanical damage, impurity or high temperatures. Never pick it to pieces !
- Do not throw the battery in the fire nor expose it to the temperatures over +60°C. Danger of explosion or fire !
- Do not use the mobile phone near the medical appliances without having the confirmation that the radio waves do not influence its function.
- Mobile phone can influence the function of the cardiac pacemakers or other implanted appliances – please consult your medical doctor
- Use the phone on the opposite side than a pacemaker or other device are implanted at your body
- In cases of suspected violation immediately turn off the phone and consult your medical doctor

- Switch off the mobile phone in the aircraft
- Always switch off the mobile phone near explosives
- Do not place the mobile phone or its holder in the area above the airbag in the car
- Keep it out of reach of children. It contains small parts that could be swallowed or may hurt
- Software and hardware of the mobile phone are continuously innovated. The importer reserves the right to alter the instruction manual or particular functions of the mobile phone without a prior notice.

Your mobile phone

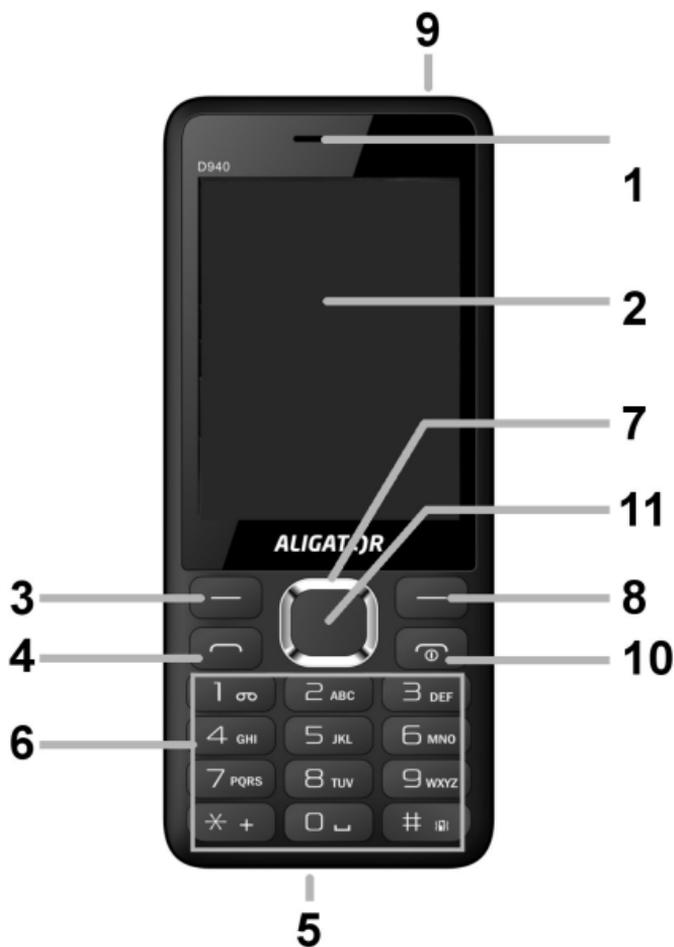

- | | |
|-----------------------------------|---------------------------------------|
| 1. Earphone | 8. Right functional button / contacts |
| 2. Display | 9. Torchlight |
| 3. Left functional button | 10. Button : End call / Switch on |
| 4. Button „Calling“ | 11. Button OK |
| 5. Charger and Earphone connector | |
| 6. Numeric keypad | |
| 7. Navigational button | |

Insert SIM, memory card and battery

1. Remove the battery cover on the back side of the phone
2. Insert one or two SIM cards at the slots under the battery space. Battery must be removed when inserting SIM cards
3. Insert the memory microSD card at the slot
4. Insert battery
5. Put the battery cover back

Battery charging

Battery indicator is placed at the top of the screen. If the battery is discharged, proceed as follows:

1. Plug the charger into an electrical outlet
2. Connect the charger to the phone
3. After recharging the battery, disconnect the charger from the phone and then from the electrical outlet.

The phone can be charged in both On / Off mode.

If the battery is completely flat, eg. after a long period of disuse, it may take up to several tens of minutes before the charging indicator appears and before you can turn on your phone and start using it.

Switch On / Off

To Switch On / Off press and hold the button (10). Finish the call or the application, event.you return to the main screen by a short press of the button (10)

In case the lock of the cell phone is activated please insert the password. **The default password is 0000.**

Making calls

Enter the tel.number with the use of the keypad buttons and press the button (4). In case 2 SIM cards are inserted you will be asked to choose which one will be used for calling

Keypad lock

To set up the automatic keypad lock choose in menu :
Settings > Security > Autom. Keypad lock

You can lock the keypad by press of the left functional button (3) followed by a press of the button *.

In case the lock of the cell phone is activated please insert the password. **The default password is 1122.**

To unlock the keypad please press first the left button (3) followed by (*)

Even if the keypad is locked you can call the emergency number 112.

Volume

Volume level of the headphone can be adjusted during the call by pressing of the directional button up / down (7). When listening to audio then use the buttons * and #. For handsfree activation – during the call please press the right functional button (8).

Warning : *Exposing to an excessive noise can damage your hearing. Listen to the music with reasonable volume level and do not hold the device close to the ear, especially when using a loud-speaker !*

Position of antennas

Internal antennas for transmission and reception are placed at the upper and bottom back part. Do not cover the places where the antennas are placed. While making a call please keep the mobile phone at least 2-3 cm away from the body to minimalise the quantity of the electromagnetic radiation absorbed by your body. Covered antennas may influence the intensity of transmission and also the battery life.

Insert of text

Keypad of the cell phone enables to enter not only the digits but also the letters/characters. In case of inserting of the characters each button offers to write several letters. For example the button „2“ can write the letters A, B and C. A gap can be written with a button „0“. You can insert the letter by

repeated presses of a button, several times in quick succession till the correct letter on the screen displays. For example : letter A is the first in line it means you press only once the button 2. Letter C is the third in line it means you press quickly the button 3 times.

- With the button # you can switch (when you write text) between the writing of small and capital letters and digit mode
- With the button * you can enter the special characters

Telephone directory

Numbers of your telephone contacts can be stored both at the SIM card memory and at the memory of the cell phone

Dialling numbers from contact list

The simplest way to display the list, press the right function key "Names" (8). Now you can enter the name that you are looking for. After that a list of matching contacts will jump immediately.

Move the button up and down to select the contact you want to call and press the call button (4).

When viewing the list, a silhouette icon appears on each contact if the contact is stored in the phone memory. If it is saved on the SIM card, a SIM card number 1 or 2 appears

Torchlight

Turn On/Off a Torchlight (9) positioned on the upper side of the phone by pressing and holding of a button „0“ on the main screen.

Shortcuts

Favourite functions can be assigned to one press of one of the 4 directional sides of the navigation button (7). Such a function will start after the press of one of the direction.

For example : camera will start to work after pressing of the directional button „up“ (set up from the production).

To change the settings, go to the menu :

Settings >Telephone > Shortcuts

Safety and ecology

Used electric device



Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste! **Never throw the used electric device away at the common municipal waste!!!**

Hand over the used electric device to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used products.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential waste !!!

They may contain the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used products.

Handling with the used batteries in contradiction with given instructions is illegal!

Declaration of conformity

ADART COMPUTERS s.r.o. declares that the type of ALIGATOR D940 radio device is in compliance with Directive 2014/53 / EU.

CE 0700

Issued in Prague, on 07.09.2017:

.....
ADART COMPUTERS s.r.o.