

ALIGAT()R

SOS Locator



VS 900 Quick Guide

Contents

Important instructions.....	3
Putting into operation.....	6
Insert SIM, memory card, battery.....	6
Battery charging.....	7
Switch On / Off.....	8
Automatic time setting.....	9
Description of mobile controls.....	10
Icons on the screen.....	16
Making calls.....	17
Dialling.....	17
Answering call by cover opening.....	18
Phone contacts.....	18
Photo contacts.....	19
SOS calls and SMS.....	19
Starting emergency call and SMS.....	19
SOS Locator	23
Setting of SOS function.....	24
SMS Messages.....	25
Torchlight.....	25

FM Radio	26
Bluetooth	26
SIM toolkit.....	26
Fotocamera.....	27
Mobile phone settings.....	28
Security.....	28
PC connection.....	28
Safety and ecology.....	29
Declaration of conformity.....	30

Important instructions

Thank you for buying of our ALIGATOR mobile phone. Before you start please read carefully this instruction manual.

- Do not use the mobile phone in the prohibited areas
- Do not use the mobile phone while driving the car
- Do not use the mobile phone near the medical appliances without having the confirmation that the radio waves do not influence its function.

- Mobile phone can influence the function of the cardiac pacemakers or other implanted appliances – please consult your medical doctor
- Switch off the phone in the aircraft. Do not use mobile phone near the petrol stations. Always switch off the mobile phone near explosives
- Use only the original batteries supplied by the producer. Danger of damage of the mobile phone or explosion. Do not throw the battery in the fire nor expose it to the temperatures over $+60^{\circ}\text{C}$. Danger of explosion or fire
- SAR – mobile phone meets all prescriptions for maximal emission of electromagnetic radiation.
- Please keep the mobile phone 2.5 cm away from the body while calling. You lower by that the quantity of

electromagnetic radiation absorbed by your body.

- Handle the mobile phone with care, protect it from falling on the ground, from mechanical damage, impurity or high temperatures. Never pick it to pieces !
- Do not place the mobile phone or its holder in the area above the airbag in the car
- Keep it out of reach of children. It contains small parts that could be swallowed or may hurt
- Sometimes, the top of the external display, including battery and signal icons, may not appear. In this case, turn the phone off and on to display it correctly.
- Software and hardware of the mobile phone are continuously innovated. The importer reserves the right to

alter the instruction manual or particular functions of the mobile phone without a prior notice

Putting into operation

Insert SIM, memory card and battery

1. Slip your nail at the slot under the battery cover on the back side of the mobile phone and pull down carefully the cover.



2. Insert firstly one or two SIM cards at the prepared slots. Insert SIM and also MicroSD memory cards (if you have) as per the pictures placed near the slots.

3. Insert the battery. The three metal contacts must point toward the bottom of the phone. Make sure that the battery clicks smoothly into the slot in the mobile phone. Put the battery cover back.



ATTENTION! Turn off the phone and disconnect the charger when handling the battery, card or SIM card. Only use original batteries supplied by your phone manufacturer!

Battery charging

Be sure that the battery is placed at the mobile phone. Connect the charger and the charging will start automatically.

Mobile phone can be charged if it is in switched on or switched off mode.

Charging level is indicated on the mobile screen.

Battery discharged	Fully charged
	

Mobile phone will warn you by an acoustic signal and by message on the screen when the battery is almost discharged. In this case charge the battery as soon as possible. Mobil phone can also be charged by placing at the charging stand.

Switch On / Off



to SWITCH ON the phone - press and hold the red button, till the phone turns on. (Now you can be asked to enter the PIN

code in case the PIN protection is activated).

to SWITCH OFF - press and hold the red button, until the mobile turns off + press button **Yes (2)** to confirm it.

Before Switching On be sure that the battery is inserted and is charged.

Automatic time setting

You will be asked to confirm the time after the first switch on of the phone :

Settings → Telephone → Time and Date → Autom.time → On/Off.



Description of mobile controls

No **Buttons**

Function

1 Right functional button

-starts contacts in standby mode
-return from menu or exit current function
-other functions depending on context (current function is shown on display above the button)

2 Left functional button

-display Messages in standby mode
-confirms selection in menu or activates selected function (OK)
-other functions depending on context (current function is shown on display above the key)

3 **Navigation
button Up /
Down**

-press Up in standby mode to display phone menu , press Down to display photo contacts
-move in menu and in phone directory

4 **Red
button**

-long press to Switch On / Off
-stop or reject a call
-return from the menu or exit current function on the main screen

5 **Green
button**

-press the button to answer the call
-displays call history in standby mode

6 **Button 0**

-when writing tel.number enables to write „0“, when writing text enables to write „gap

- long press to switch on the torchlight

7 Button #

- insert # when writing numbers
- in text writing mode toggles method of character input
- long press to turn on/off silent mode

8 Button *

- inserts *, +, p, w when writing numbers
- in text writing mode enables to insert special characters

9 Contacts for charging stand

Please keep the contacts clean so that the stand can work correctly

10 Connector Micro USB serves to connect the charging cable or PC

11 Flashlight powerful LED torch is located on the top edge of the back of the phone. Turn the light on / off by long pressing the **0** key long.

12 Earphone enables to listen the call

13 Earphone connector serves to connect headphones / mini-handfree

14 Volume +/- -to control ringtone volume, music playback, or FM radio
-during a call adjusts the volume of the call in the earpiece / loudspeaker

 





15 Shutter button

- press to turn the camera On.
- acts as a trigger in camera mode
- in music / recorder mode, etc. press briefly to start / stop playback

16 Buttons M1, M2

- serve as a quick option to store your favorite phone numbers. The stored numbers can then be quickly dialed by simply pressing the M1 or M2 button.
 - In some menus serve to move to the sides
 - in the music or recorder mode you can go to the previous (M1) or next (M2) track
-

Icons on the screen

	Battery charge
	Signal strength
	Alarm activated
	Unread SMS message
	Missed calls
	Ringing off

Making calls

Dialling

Insert required phone number on the mobile keypad and press the green button **(5)**. Mobile will start to dial required number.

If you have dialled by mistake a wrong number, just press the right button „Delete“ **(1)** and the last digit will be deleted.

If you need to delete the whole number, press the red button **(4)** and a whole number is deleted.

- Press green button (5) to answer the call
- Press red button (4) to reject the call
- While talking - adjust the volume by the volume button (14)

- While talking - press right button On/Off (1) to activate the Handsfree function

Answer a call by opening the cover

You can set the phone to accept the call by simply opening/sliding the cover and closing it by closing/sliding the cover. Select in the menu:

Calls → Call Settings → SIM1 / SIM2 Settings → Advanced → Receive Mode → Opening the Cover

Phone contacts

Contacts can be stored either on the SIM card or at the phone memory.

Press (1) to display photo contacts.

Select the contact by arrows Up/Down and press (5) to dial.

Select **Contacts – New Contact** – to create a new contact at the phone.

Photo contacts

The phone can store up to 10 so-called photo contacts - that is, contacts to which a photo or picture is assigned. You can then quickly and easily dial them by selecting an image. The picture is also displayed when you receive a call. Press the Down button (3) on the main screen to display the photo contacts.

SOS calls and SMS

Starting the emergency call and SMS

Press and hold the SOS button on the back of your phone. An audible alarm sounds. Now you have 5 sec. to interrupt SOS calls, then the phone will automatically dial the preset numbers from

the list until they can call one. The phone repeats calls to all numbers for a max.3x

The phone also sends an emergency SMS message to the preset numbers with the preset text (to select text in the menu)

Setting → SOS Set.. → SOS SMS

→SMS text. The phone will remain in the emergency mode in case it was not connected. In this emergency mode the phone will automatically answer incoming calls and automatically activates the handsfree feature - loud listening. The display will show the inscription SOS.

Turn the phone off and on again to deactivate the SOS function. SOS function is only available if it is enabled at the settings of the phone and if the numbers are set up at the phone that the mobile

should automatically call and send SMS message to.

For set up select in menu : **Settings** → **SOS Set.**

Deactivation of sending SMS message

It is possible to deactivate the sending of SMS messages after the activation of the SOS button. Select in menu :

- **Settings** → **SOS Set.** → **SOS SMS** → **Send SMS**
- Select On / Off

SOS Locator – phone localisation

Your phone has a special function that allows you, after pressing the SOS button, to determine the location of the phone and send it via SMS to recipients in the form of a link to view the map - if the recipient is using a regular phone with a web browser.

Just "click" on this link and a map showing the position of the phone displays.

The location is determined based on the focus of the network operator, the accuracy is dependent on the density of the network at a given position, eg. in the cities the position can be determined with an accuracy of tens to a few hundred meters, outside the buildings/cities but a focus accuracy usually decreases.

This service is provided without any guarantee, at the own risk of an user and the accuracy of the results or the availability of services is not guaranteed by the supplier of telephone, operator or provider of maps. The service may be terminated at any time without notice.

Setting of function **SOS Locator**

You need to turn on the function in the settings for a proper service. A SMS with position is then sent each time the SOS button is activated instead of the standard emergency SMS message.

- Select in menu: **Settings** → **SOS Set.**
→ **SOS regime** → **SOS Locator**

Remote location request

Position of your mobile phone can be remotely detected by using of a special control SMS.

It is sufficient to send just a command via SMS with a text **SOSLOCATOR**. Your ALIGATOR phone then responds by sending of the current position via SMS.

***Important:** Your phone sends location and responds only to SMS messages on*

numbers that are stored at the mobile phone for SOS emergency calls !

Setting of emergency SOS functions

To set up the SOS Locator select in menu : **Settings → SOS Set.**

An offer is displayed :


- 1. SOS regime** – enables to switch SOS function. Options are :
 - **Off** – SOS function incl.SOS button are Off
 - **Normal** – turns on the SOS calls and sending of emergency message, but the positioning function is turned off
 - **SOS Locator** – SOS calls incl. sending of position are On
- 2. SOS SMS** – allows to enable / disable (by pressing the SOS button) sending

emergency SMS messages and set the text of emergency SMS

3. **Siren** – allows to run the siren after pressing the SOS button

4. **SOS numbers** - sets up to five numbers to which the phone sends an emergency SMS and tries to call after activating the SOS button

SMS messages

Your phone can receive and send SMS and MMS text messages. The new message that you receive will be notified by a symbol  on the phone screen.

Create and send an SMS message in the menu: **Messages** → **Write** → **Sms**

Torchlight

Can be switched on/off by a long press of the button 0 **(6)**

FM Radio

Your mobile phone is equipped with FM Radio. Select in menu : **Multimedia** → **FM Radio**

Press the volume buttons (14) to adjust the volume. You can change the frequency using the M1 / M2 (16) keys. Press the shutter button (15) repeatedly to turn the sound on / off. Press the Left button Options (2) to display the FM radio menu (channel list, manual and auto tuning, station storage).

Bluetooth connection

Bluetooth is a modern system that allows you to wirelessly connect different devices, such as a wireless hands-free phone, a phone and a computer, or two phones with each other.

It is possible to transfer call sound or send files or receive files from another device.

Select in menu:

Settings → Connection → Bluetooth

SIM toolkit

Choose in menu: **Organizer → SIM Toolkit** - for mobile banking, timetables and other SIM services of your operator.

Photo camera

The camera lens is located on the back side of the phone cover. Press the shutter button **(15)** to turn on and the camera turns on after a while.

When you activate the camera you can shoot images by pressing the shutter button **(15)**.

Press the left "Options" button **(2)** to display the camera menu.

Press the button **(4) to close** the camera. It is advisable to store the snaps on the memory card.

Mobile phone settings

Select in menu: **Settings** → **Phone**

Allows you to set basic phone parameters:

Security

Select in menu : **Settings - Security**

enables to set up PIN code of SIM card, phone password.

Default password from production is **1122**.

Connection with PC (and battery charging as well) via USB connector

Attention! Following OS are required for connecting : Windows Vista, 7, 10 and newer !

Safety and ecology

Used electric device



Mobile phone is an electronic appliance. It means it must NOT be manipulated as a common residential waste. **Never throw the used device away at the common municipal waste!!!** They may contain the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation or contact your dealer.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential waste !!!

They may contain the substances dangerous to the environment. Hand over

the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used products.

Handling with the used batteries in contradiction with given instructions is illegal!

Declaration of conformity

ADART COMPUTERS s.r.o. declares that the type of ALIGATOR **VS 900** radio device is in compliance with Directive 2014/53 / EU.



Importer: www.aligator.cz

Copyright © 2017 ADART COMPUTERS s.r.o.