

ALIGATOR

SOS Locator



A890

Quick Guide

Contents

Important instructions.....	3
Putting into operation.....	5
Insert SIM, memory card + battery....	5
Battery charging.....	6
Switch on / off.....	8
Mobile controls.....	9
Icons on the screen.....	15
Screen unlock.....	18
SOS function.....	18
SMS messages.....	26
Alarm clock, Calendar, Calculator...	27
Bluetooth connectivity.....	27
SIM toolkit, Multimedia.....	28
PC connection.....	30
Safety and ecology.....	31
Declaration of conformity.....	32
Battery liquidation.....	32

Important instructions

- Do not switch on and use the mobile phone in the prohibited areas. Do not use the mobile phone while driving the car
- Do not use the mobile phone near the medical appliances without having the confirmation that the radio waves do not influence its function
- Mobile phone can influence the function of the cardiac pacemakers or other implanted appliances – please consult your medical doctor
- Turn it off in the aircraft. Do not use the mobile phone near the filling petrol station
- Turn off the mobile phone always near explosives. Use always original batteries supplied by the producer (danger of damage of explosion of the

mobile phone) **Do not throw the battery in the fire nor expose it to the temperatures over +60°C.**

Danger of explosion or fire !!

- SAR – mobile phone meets all prescriptions for maximal emission of electromagnetic radiation
- Please keep the mobile phone 2.5 cm away from the body while calling. You lower by that the quantity of electromagnetic radiation absorbed by your body
- Handle the mobile phone with care, protect it from falling on the ground, from mechanical damage, impurity or high temperatures. Never pick it to pieces!
- Do not place the mobile phone or its holder in the area above the airbag in the car. Keep it out of reach of

children. It contains small parts that could be swallowed or they may hurt

- Sometimes, the top of the external display, including battery and signal icons, may not appear. In this case, turn the phone off and on to display it correctly.
- Software and hardware of the mobile phone are continuously innovated. The importer reserves the right to alter the instruction manual or particular functions of the mobile phone without a prior notice.

Putting into operation

Insert SIM, memory card and battery

1. Slip your nail at the slot under the battery cover on the back side of the mobile phone and carefully pull down the cover.

2. Insert phone or two SIM cards at the prepared slots. Insert SIM and also MicroSD memory cards (if you have) as per the picture instruction.
3. Insert the battery. The three metal contacts must point toward the top of the phone. Make sure that the battery clicks smoothly into the slot in the mobile phone.
4. Put the battery cover back.

ATTENTION! Turn off the phone and disconnect the charger when handling with the battery, memory or SIM card. Only use original batteries supplied by your phone manufacturer!



Battery charging

Be sure that the battery is placed at the mobile phone. Connect the

charger and the charging will start automatically.

Mobile phone can be charged if it is in switched on or switched off mode.

Charging level is indicated on the mobile screen.

Discharged	Fully charged
	

Sometimes it happens that after the battery is fully discharged phone will not start charging the battery by connecting the charger. In this case, leave the phone connected to the charger for several hours until the battery starts charging.

Attention! If you leave the battery fully discharged for a long time, it

can lead to its destruction, which is not covered by warranty!

Basic manipulation

Switch On / Off



to **SWITCH ON** the phone - press and hold the red button, till the phone turns on. (Now you can be asked to enter the PIN code in case the PIN protection is activated)

to SWITCH OFF - press and hold the red button, until the mobile turns off. then you must confirm the shutdown by pressing the left button **Yes (2)**.
Before Switch On – make sure that the battery is inserted at the mobile phone and that it is fully charged.

Automatic time setting

The first time you turn on your phone, you will be prompted to confirm the time. Phone time is automatically set when the mobile network supports it.

Mobile controls



Description of Mobile controls

No	Name	Function
1	Right functional button	<ul style="list-style-type: none">-starts contacts in standby mode-return from menu or exit from current function-other functions depending on context (current function is shown on display above the key)
2	Left functional button	<ul style="list-style-type: none">-displays Messages in standby mode-confirms selection in menu or activates selected function (OK)-other functions depending on context

(current function is shown on display above the key)

3 Navigation button Up / Down - display phone menu
-move in menu and in phone list

4 Red button -long press to Switch On / Off
-stop or reject a call
-return from the menu or exit current function on the main screen

5 Green button -press the button to answer the call
-displays call history in standby mode

6 Button 0 -when writing tel.number enables to

write „0“, when writing text enables to write „gap“
long press to turn on/off flashlight

7 Button #

- inserts # when writing numbers
- in text writing mode toggles method of character input
- by long press turns on/off the silent mode

8 Button *

- inserts *,+, p, w when writing numbers
- in text writing mode enables to insert special characters

9 Button OK

Serves to confirm selection or other functions

**10 Connector
Micro USB** Used to connect the
charger cable or PC

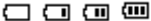





11 Flashlight powerful LED flashlight
is placed on top of the
phone
long press of button „0“
to turn on/off the
flashlight

12 Earphone used to listen the call

**13 Earphone
connector** Used to connect
headphones / mini-
handfree

14 LCD Display color screen shows all
the important
information for using
your phone

Icons on the screen

	Battery charge level
	Signal strenght
	Alarm activated
	Unread SMS message
	Missed calls
	Ringer Off

Making calls

Dialing

Insert required phone number on the mobile keypad and press the green button **(5)**. Mobile will start to dial required number.

If you have dialled by mistake a wrong number, just press the right button „Delete“ **(1)** and the last digit will be deleted.

If you need to delete the whole number, press the red button **(4)** and a whole number is deleted.

- **To answer the call** - press the green button **(5)**.
- **To reject the call** – press the red button **(4)**

- **adjust the Volume** (during the call) by pressing of navigation button **Up/Down (3)**
- to activate **hands free** – press left button (during the call) **Option (2)** and select StartRep

Dialing from the contact list

The simplest way to display the contact list is to press the right button **(1)**. Now you can type the first letter of the name you are looking for. After that a contact list, sorted alphabetically by name, appears.

Use the Up and Down button to select the contact you want to call and press the green button **(5)** to make a call.

When viewing the contact list, the distinguishing icon appears to show if the contact is stored on the SIM card or at the mobile phone.

Contacts

Select **Contacts** at the main menu of the phone. Select **New Contact** to create a new contact.

Screen unlock

Select in menu to set :

Settings → **Telephone** → **Display** →
Keypad lock

SOS call and SMS

Starting the emergency call and SMS

Press and hold the SOS button on the back side of the phone. An audible

alarm begins and the phone will begin automatically to dial the preset numbers from the list until it can reach any of them. The phone repeats max. 3 times to dial all preset numbers.

The phone also sends an emergency SMS message with a preset text to all preset phone numbers. (For TEXT setting : select in menu **Organizer** → **SOS setting** → **SOS SMS** → **text SMS**).

During the SOS call, you can cancel the SOS call cycle by holding down the SOS button

In case the mobile phone cannot reach any pre-set numbers, it remains in so-called „Emergency Mode“.

In the emergency mode, **the phone will automatically receive incoming**

calls and automatically activates the handsfree - speakerphone. Inscription „SOS“ appears on the display.

To **deactivate** the SOS function – just turn off and on the mobile phone.

SOS function is only available if it is enabled in the settings of the phone and if the numbers are set up at the phone that the mobile should automatically call and send SMS message to, see below. Select in menu to set up : **Organizer → SOS Setting**

Deactivation of calls or SMS sendings

It is possible to turn off the call or send messages after activating the SOS button. Select in the menu:

1. **Organizer** → SOS Setting → SOS SMS → Send SMS / SOS calls
2. Select On / Off

SOS Locator – mobile localisation

Your phone has a special function that allows you, after pressing the SOS button, to determine the location of the phone and send it via SMS to recipients in the form of a link to view the map - if the recipient is using an ordinary phone with a web browser. Just "click" on this link and a map showing the position of the phone displays.

The location is determined based on the focus of the network operator, the accuracy is dependent on the density

of the network at a given position, eg. in the cities the position can be determined with an accuracy of tens to a few hundred meters, outside the buildings/cities but a focus accuracy usually decreases.

This service is provided without any guarantee, at the own risk of an user and the accuracy of the results or the availability of services is not guaranteed by the supplier of telephone, operator or provider of maps. The service may be terminated at any time without notice.

SOS Locator Settings

The SOS function needs to be properly set. SMS message with a position (instead of the standard

emergency SMS) is always sent after the activation of the SOS button.

Select in menu: **Organizer → SOS Set. → SOS Regime → SOS Locator**

Remote location request

Position of your mobile phone can be remotely detected by using of a special SMS control.

It is sufficient to send just a command via SMS with a text **SOSLOCATOR** on your ALIGATOR phone. Your ALIGATOR phone then responds by sending of your current position via SMS.

IMPORTANT: *Your phone sends location and responds only to SMS messages from numbers that are*

*stored in phone for emergency calls.
Setting of emergency SOS function*

Setting of emergency SOS function

To set the SOS Locator , select in menu: **Organizer → SOS Set.**


The menu appears :

- 1. SOS regime** – Allows to switch SOS function. You can choose the following options:
 - **Off** –SOS functions including the SOS button are Off
 - **Normal** - SOS calls and sending of emergency SMS is On, but positioning is Off
 - **SOS Locator** – SOS calls including positioning are turned on

- 2. SOS SMS** – allows you to enable / disable the sending of emergency SMS messages after pressing the SOS button and to set the text of emergency SMS
- 3. Siren** – determines whether the siren is triggered when the SOS button is pressed
- 4. SOS Calling** - Turns SOS calls on / off
- 5. SOS numbers** - sets up to five numbers on which the phone sends an emergency SMS and tries to call it after activating of the SOS button
- 6. Low battery** - sending an emergency SMS with location and battery status when the battery is low

7. GPS Module - Turn on / off the built-in GPS module

SMS Messages

Your phone can receive and send text SMS and MMS messages. The new message you receive will be notified by a symbol  on the phone screen. If you have a new, unread message, a notification will appear on the screen. An unread message is marked with a closed envelope image, the read message is marked with an open envelope symbol.

FM Radio - Select in menu:

Multimedia → FM Radio

Torchlight - Turn the light on / off by pressing the 0 **(6)** button for a longer time.

Alarm Clock - Your phone comes with several independent alarm clocks

Calendar

Allows you to view the calendar by months or weeks. Insert of notes + reminders is possible.

Calculator

Your phone has a simple and practical calculator. Select in the menu:

Organizer → Calculator

Bluetooth connectivity

allows you to wirelessly connect different devices, such as a wireless hands-free phone, a phone and a computer, or two phones with each other. It is possible to transfer call

sound or send files or receive files from another device.

Select in menu:

Organizer → Bluetooth

SIM toolkit services

Select in menu **Organizer → Services → SIM Toolkit** for mobile banking, timetables and other SIM services of your operator.

Music player – plays music files

Multimedia → Music

Camera

The camera lens is located on the back of the phone cover. Use a memory card to use the camera.

To switch on – select :

Multimedia-> Camera

Security

Select in menu: **Settings**→**Security**

Allows you to set the SIM card PIN, phone password:

Telephone – to turn on / off the phone with a password and its change. The default factory password is **1122**

Select operator network

Select in menu: **Settings**→**Network**

Allows you to set up an automatic or manual selection of the operator (suitable for border areas, for example, to prevent unwanted roaming)

Restore settings

Select in menu: **Settings**→**Restore settings**

Allows you to reset the phone to its factory settings. Requires a password for your phone. By default, the password is set at the factory: **1122**.

PC Connection

The phone comes with a standard micro USB connector that can be used for both charging and connecting to a personal computer.

ATTENTION!

Requires Windows Vista, 7, 10 and up! If you use other operating systems, you may need to use special drivers.

The **ALIGATOR A890** mobile phone is designed for use in EU countries.

Changes to all parameters are reserved.
Check with the dealer for the current
values of the listed parameters.

Safety and Ecology

Used electric devices



Mobile phone is an electronic
appliance. It means it must not be
manipulated as a common
residential waste.

**Never throw the used device
away at the common municipal waste!!!**

It must be, after the use, handed over to the
appropriate collection point for its recycling
and ecological liquidation. Breach of these
instructions is not legal. This device may
contain the substances dangerous to the
environment – it is necessary to handle it in a
proper way to protect it. Please contact your
dealer to get more information how to handle
the used product.

Battery liquidation



Used/old batteries and accumulators do not belong to the common residential waste !!!

They may contain the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to handle the used product.

Do not throw the battery in the fire nor expose it to the temperatures over +60°C.

Danger of explosion or fire !!!

Handling with the used batteries in contradiction with given instructions is illegal!

Declaration of Conformity

Hereby ADART COMPUTERS s.r.o. declares that the type of ALIGATOR A890 is in compliance with Directive 2014/53 / EU.

