

ALIGATOR



S4090 Duo 4-core IPS

Quick Guide

Google, Android, Google Play and other brands are trademarks of Google LLC.

Contents

Before you start.....	2
DUAL SIM function.....	3
Important instructions.....	3
Mobile phone controls.....	6
Insert battery and SIM card.....	7
Switch On / Off.....	8
Activation and screen unlock.....	9
Operating system Android.....	10
Basic control.....	10
Making calls.....	15
Messages.....	17
Selection of network.....	18
PC connection.....	18
Selection of SIM for calls, SMS,data..	19
Safety and ecology.....	20
Declaration of conformity.....	21

Before you start

Thank you for buying of our ALIGATOR mobile phone . Before you start please read carefully this instruction manual.

For more information, instructions, advice, etc., please visit the website: <https://support.google.com/android>.

DUAL SIM function

Your mobile phone can be operated with 1 or 2 SIM cards. If you insert only one SIM card the mobile phone works as an ordinary mobile phone.

In case you insert 2 SIM cards at the mobile phone both are active at the same time. It means you can be called on both SIM cards at the same time without any switch between them. Both cards are on line.

Important instructions

Do not use the mobile phone at the prohibited areas . Do not use the mobile phone while driving the car

Do not use the mobile phone near the medical appliances without having the confirmation that the radio waves do not influence its function

Mobile phone can influence the function of the cardiac pacemakers or other implanted appliances – please consult your medical doctor

Switch off the mobile phone always in the aircraft

Do not use mobile phone near the petrol station. Always switch off the mobile phone near explosives

Use only the original batteries supplied by the producer. Danger of damage of the mobile phone or explosion

Do not throw the battery at the fire nor expose it to the temperatures over +60°C. Danger of explosion or fire

SAR – mobile phone meets all prescriptions for maximal emission of electromagnetic radiation

Please keep the mobile phone 2.5 cm away from the body while calling. You lower by that the quantity of electromagnetic radiation absorbed by your body


Handle the mobile phone with care, protect it from falling on the ground, from mechanical damage, impurity or high temperatures. Never pick it to pieces !

Do not place the mobile phone or its holder in the area above the airbag in the car. Keep it out of reach of children. It contains small parts that could be swallowed or they may hurt

Software and hardware of the mobile phone are continuously innovated. The

importer reserves the right to alter the instruction manual or particular functions of the mobile phone without a prior notice.

Mobile phone controls

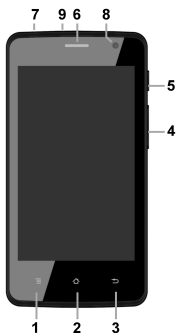

1. Button : APK

2. Button : Main screen

3. Button : Backwards
4. Button : Volume
5. Button : Switch On / Off
6. Earphone
7. Headset connector
8. Front camera
9. Micro USB connector

Insert battery and SIM card

Slide your fingernail into the slot under the cover on the back of the phone and gently pull it off to remove it.

Insert firstly one or two SIM cards at the prepared slots. Insert SIM and also MicroSD memory cards (if you have) as per the picture instructions.

Insert the battery. Make sure that the battery clicks smoothly into the slot in the mobile phone. Put the battery cover back. Place the cover on the back side of the mobile phone and press gently around the circuit until the cover clicks properly on its place.

Switch On / Off

To **Switch On** - press the button **(5)**. Starting of the mobile phone can last few seconds.

To **Switch Off** – press and hold the button **(5)** till the indicator window of a switch off appears on display.

Confirm it and the mobile phone will turn off.

The first launch of mob.phone

When the phone is switched on for the first time, a wizard will be launched,

allowing you to make basic settings for your phone, network, user account, etc.

Select the desired language by tapping on the screen and then following the on-screen instructions.

Activation and Screen unlock

The screen turns off automatically after a certain time of inactivity. Turn on / off the screen by a short press of the button **(5)**.

It is necessary to unlock the screen after the activation. Put your finger on a „Lock“ symbol and move it in the upwards direction. The screen will be unlocked.

Operating system Android™

Your mobile phones is provided with the operating system Android™ . The

device is in reality a small personal computer that can be connected with internet from which you can download many useful applications (via Google Play™ store).

Basic control

Meaning of Virtual Touch Buttons (1) to (3)

- (1) **Running Apps / APK** – used to display a list of recently run applications
- (2) **Main screen** – short press serves to return to the main screen. Long press displays the Google search
- (3) **Backwards** – serves to return by one level back. (Jump on the preceding screen, closing of offers or dialog windows on the screen, etc.)

System control

Your phone is operated by using both the buttons above, but mainly using the touch screen. Selecting items on the screen, confirming dialogs and graphical buttons on the screen are done by tapping on them.

Main screen

Like on your PC, you have a desktop available on your mobile phone and the Main Screen performs this function.

It is divided into multiple pages, which you can view by sliding your finger sideways.

You can place application and link shortcut icons or „widgets“ on the main screen.

Widgets are gadgets that allow you to view some data or controls - such as time, weather, power controls, and more.

Application

Swipe up in the middle of the bottom of the main screen to swipe the apps installed on your phone.

The basic features of the phone are applications for making calls, SMS sendings, e-mail, as well as many other useful and fun applications.

There are thousands of applications for the operating system you can use, but not all of them must work properly on your phone. Before you buy an app, always try its free version to make sure it works properly with your phone.

Notification and status display

So called „status bar“ is placed in the upper part of the screen. You may find here the information about time, battery level and signal strength but also other useful information. For example the information about new SMS, information about the system or applications. Status bar can be moved down by your finger and rolled. You will get a detailed overview about all announcements and information including the possibility of a quick control of some mobile phone functions

Google account

It is necessary to create the Google™ account for a proper use of the system which can be set up in following simple steps (you can also set it later) :

1. Open the application menu by sliding the arrow on the main screen upwards
2. Tap the **Settings** icon
3. Select in menu **Accounts** and choose **Add Account**
4. Further **follow** instructions on the screen

Mobile phone setup

All individual items of the telephone set up are clearly arranged at the settings menu.

Press the button **Menu** - select **Set up** and make the required changes.

Making calls

Dialling

Click on the earphone icon on the main screen. A screen with keypad for number dialling will be displayed.

You can enter the tel.number with the use of the keypad buttons. Similarly as on the common telephone there are the letters displayed on the buttons so you can enter also the name.

The dialled number and all corresponding items of the telephone directory will be displayed after entering of the letters on keys of the screen.

At the bottom part of the screen you can find the calling button with a symbol of the headphone. You can dial the number by its pressing and make your call.

Answer and Finish the call

If somebody is calling you the information about his telephone number (if available) and a button with the receiver is displayed on the screen

to **answer** the call : move the button upwards

to **finish** the call : move the button downwards

Set the call volume

During a call, you can adjust the volume using the button **(4)** on the side of the phone.

ATTENTION! The handset can be very loud. Therefore, do not set the volume unnecessarily to the highest level to avoid hearing damage. In addition, with high-volume

headphones, the other party can hear the echo of their voice. In this case, turn down the volume to when this phenomenon disappears.

Messages

Click on the icon of Messages on the lower part of the main screen or open the screen with applications and select the item **Messages**

1. The list of conversations containing received and sent SMS and MMS messages is displayed.
2. Set the button at the bottom right of the screen.
3. You can now enter the recipient and then the message text

4. Press the *arrow* button at the right side of the message text to send the message.

Selection of network

You can choose whether your phone will use 2G or 3G network.

Tap on **Settings** and select **Network and internet**.

Next step, select **Mobile networks** and select **Preferred network type** for each SIM card. Now select item 2G or 3G.

PC connection

You do not need any special drivers for connection to the common PC (valid for OS Windows Vista, 7, event. newer). Follow these steps :

1. Connect the mobile phone and PC with the enclosed cable

2. Download the status bar and tap the line at the bottom of the expanded menu.
3. The connection modes menu opens. We recommend using "File Transfer"
4. Then the phone connects to the PC as "Media Device"

After that the phone's Internal storage and an inserted MicroSD card are connected with your computer in the section Computer - Portable Devices, under the name ALIGATOR S4090. The connection can be cancelled by disconnecting of the cable.

Selection of SIM card for calls, SMS and internet

Launch **Settings** and select **Network and Internet**. Next select **SIM card**.

Now you can set which SIM card will be used for calls, SMS and internet connection.

Safety and ecology



Used electric devices

Mobile phone is an electronic appliance. It means it must not be manipulated as a common residential waste !

Never throw the used devices away at the common municipal waste!!!

They may contain the substances dangerous to the environment. Hand over the product to the respective collection point which provides the ecological liquidation.

Please contact your dealer to get more information how to deal with the used products.

Battery liquidation



Retained batteries and rechargeable batteries do not belong to ordinary municipal waste !!!

They may contain the substances dangerous to the environment. Hand over the battery to the respective collection point which provides the ecological liquidation. Please contact your dealer to get more information how to deal with the used batteries.

Do not throw the battery in the fire nor expose it to the temperatures over +60°C. Danger of explosion or fire.

Handling with the used batteries in contradiction with given instructions is illegal !!!

Declaration of conformity

ADART COMPUTERS s.r.o. hereby declares that the type of the radio device ALIGATOR S4090 is in compliance with Directive 2014/53/EU.



www.aligator.cz

Copyright ©

ADART COMPUTERS s.r.o.,

Čimická 717, CZ-Praha, Czech Republic