

ALIGATOR

D210 Dual SIM



Quick Guide

CONTENTS

Important instructions.....	2
Mobile phone controls.....	4
Insert SIM, memory card and batterie	6
Battery charging.....	6
Switch On / Off.....	7
Making calls.....	7
Screen lock.....	7
Volume	8
Antenna location.....	8
Text insert.....	8
Phonebook.....	9
SMS messages.....	10
Lantern.....	10
Shortcuts.....	10
Safety and ecology.....	10
Declaration of conformity.....	11

Thank you for purchasing the ALIGATOR mobile phone.
Please read this instruction manual before use.

Important instructions

- When using, protect the microphone, earphone and speaker openings from dust and sharp objects.
- Do not switch on or use the phone where prohibited
- Do not use the phone while driving

- Do not use the phone at or near the fuel station
- Always turn off your phone near explosives.
- Always use original batteries supplied by the manufacturer. Risk of phone damage or explosion
- SAR – this phone meets guidelines for the maximum emission of electromagnetic radiation.
- During a call hold the phone at least 2.5 cm away from your body to reduce the amount of electromagnetic radiation absorbed by your body.
- Handle your phone and accessories with care, protect them from mechanical damage and dirt.
- Protect your phone and accessories from extreme temperatures
- Do not dispose of the battery in fire or expose it to temperatures above + 60 ° C.
- Protect your phone and accessories from falling
- Never disassemble the phone or accessories
- Do not use your phone near personal or medical equipment unless you have confirmed that your phone's radio broadcast does not affect its operation.
- Your mobile phone may affect the operation of pacemakers and other implanted devices.
- When making a call, place the phone on the opposite side of the body from the implanted pacemaker or other device. Check with your doctor about any risks of interference. Switch off your phone immediately if you suspect interference.
- Always turn off the phone in the airplane.
- Do not use your phone near explosives.
- Do not place or install the phone or the phone. its bracket and accessories above the airbag in the car.

- Keep out of the reach of children and do not allow them to play with it. Your phone has small parts that children could choke or injure themselves in any other way.
- Phone software and hardware are continually upgraded. Therefore, the importer reserves the right to change the instructions and individual functions of the phone without prior notice.

Mobile phone controls



1. Earphone
2. Screen

3. Left functional button
4. Button for „Calls“

- | | |
|------------------------------|-----------------------------|
| 5. Charger connector | 10. Button to Finish call / |
| 6. Numeric keypad | Switch On |
| 7. Navigational button | 11. Button OK |
| 8. Right functional button / | 12. Earphone connector |
| contacts | |
| 9. Lantern | |

Insert SIM, memory Cards and batterie

1. Remove the battery cover on the back of the phone
2. Carefully insert one or two SIM cards into the holders under the battery compartment. Make sure that the SIM cards are positioned correctly with the contacts facing down. The battery must be removed when inserting SIM cards
3. Insert the microSD card into the holder
4. Insert the battery
5. Replace the cover

Battery charging

At the top of the screen there is a battery charge indicator. If the battery is low, follow these steps:

1. Connect the charger to a wall outlet.
2. Connect the charger to the phone
3. After charging the battery, disconnect the charger from the phone and then from the wall outlet.

You can charge the phone when it is in switched on or switched off mode.

If the battery is completely discharged, such as after a long period of inactivity, it may take up to several tens of minutes before the charging indicator appears and before the phone can be turned on and ready to use.

Switch On / Off

To turn on or off, press and hold the end call key (10).

Briefly press this button to end a call or an application or to return to the main screen.

If the phone lock is activated, enter the password.

The default phone password setting is 1234.

Making calls

Enter the phone number using the telephone keypad and press the call key (4). If two SIM cards are inserted, you will be prompted to select the SIM card to use for the call.

To end or to reject the call, press the end call key (10).

Keypad lock

To set the automatic keylock properties, select:

Settings> Display> Auto key lock

You can manually lock the keypad by pressing the left button (3) and then pressing the * button.

To unlock the keypad, first press the left button (3) again and then the * button.

The emergency number 112 can also be called when the keypad is locked.

Volume

You can adjust the volume during a call by pressing the navigation button (7).

To activate handsfree / speakerphone, press the right function key (8) during a call.

Warning: *Exposure to excessive noise can damage your hearing! Listen to music at a moderate level and do not hold the device near your ear, especially when using the loudspeaker!*

Antenna location

The device has internal antennas for reception and transmission at the rear bottom part of the phone.

Do not cover the places where the antennas are located. When talking, hold the device at least 2-3 cm away from your body. This will reduce the amount of electromagnetic radiation absorbed by your body. Covering the antennas also affects the intensity of the transmission and hence the battery life.

Text input

The phone keypad allows you to enter numbers and characters. When entering characters, several letters are assigned to each button. For example, for button 2, the letters are A, B, C. To insert a space, press the 0 button. E.g. the letter A is the first one in the sequence, so press button 2

once. The letter C is the third in the sequence, so we press the button three times in quick succession.

Use the # key to toggle between writing, uppercase, lowercase, and numbers when writing text.

Special characters can be entered using the * key.

- Use the # key to toggle between writing, uppercase, lowercase, and numbers when writing text.
- Special characters can be entered using the * key.



Phonebook

Phone numbers of contacts can be stored both in the phone memory and in the SIM card memory.

Dial numbers from contact list

The easiest way to display the list is to press the right function key “Contacts” (8). You can now enter the name you are looking for. Then the list of matching contacts starts immediately.

Use the up and down keys to select the contact you want to call and press the call key (4).

When viewing the list, a phone icon  appears for each contact if the contact is stored in the phone memory. If it is stored on the SIM card, the card icon  appears.

Messages

To work with messages, select **Messages** in the phone menu and the desired option.

To write a short text or MMS message, select Write. Use the **OK button (11)** to select a recipient from the phone book or enter the number manually, enter the message text and press the OK button (11). Then follow the on-screen instructions.

Lantern

To switch the lantern (9) on the top of the phone on / off, press and hold the "0" button.

Shortcuts

Favorite functions can be assigned to one of the four direction pages of the navigation key (7). When you press one of the directions, the function starts.

To change the settings, in menu go to :

Settings→ **Phone**→ **Shortcuts setting**

Safety and ecology

Used electric device



The phone cannot be treated as normal household waste. The product may contain substances hazardous to the environment.

Never throw your old phone into the normal household waste!

At the end of its use it must be handed over to the appropriate collection point for recycling or ecological disposal. Failure to follow these instructions is illegal. Contact your dealer or local authority for more detailed information on how to handle your used product.

Battery liquidation



Old batteries and accumulators do not belong at common household waste !!!

May contain substances harmful to the environment.

Return the battery to an appropriate collection point for environmentally friendly disposal. Check with your dealer or the local authority where such a place is located. you can return the battery directly to the seller.

It is illegal to dispose of used batteries in violation of the instructions!

Declaration of conformity

ADART COMPUTERS s.r.o. hereby declares that the type of ALIGATOR D210 radio equipment complies with Directive 2014/53 / EU.